



HEARTH PRODUCTS


LENNOX HEARTH PRODUCTS
KITS AND ACCESSORIES

P/N 504,223M
REV. F 03/2008

CLEAN FACE PANEL KITS
(PAINTED FINISH)

**INSTALLATION INSTRUCTIONS FOR CLEAN FACE PANEL KITS FOR USE WITH
MERIT™, MERIT PLUS™ OR ELITE® SERIES GAS FIREPLACES**

KIT CONTENTS:	TOOLS REQUIRED:
1 ea. Top Radiant Panel 1 ea. Bottom Radiant Panel 1 ea. Lennox Nameplate 1 ea. Instruction Sheet	None

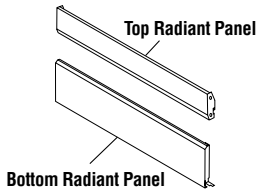

GENERAL INFORMATION

These clean face panel kits may be used with Merit™, Merit Plus™ or Elite® series gas fireplaces listed in **Table 1**.

INSTALLATION INSTRUCTIONS

Note: Do not operate fireplace without the eyebrow installed in its normal position. See **Figure 1** for models with louvers or **Figure 2** for models with clean face panel.

- Step 1.** Grasp the existing eyebrow and pull it forward away from the fireplace (it is held in place by spring tension). See **Figure 1**.
- Step 2.** Slightly lift and pull the existing top louver assembly away from the fireplace.
- Step 3.** Slide the existing eyebrow into the slots on the lower edge of the top radiant replacement panel.
- Step 4.** Hang the top radiant panel/eyebrow assembly in the opening previously occupied by the top louver assembly. See **Figure 2**.
- Step 5.** Open the bottom louver assembly by pushing in simultaneously the left and right sides of the louver assembly (the assembly is hinged at the bottom).
- Step 6.** Merit Series Units - Remove the assembly from the fireplace by removing the hinge screw and spacer on each end of it.
Merit Plus and Elite Series Units - Remove the assembly from the fireplace by sliding the hinge pin, located at the door's left side, to the right until it disengages from the left corner post hole. Pull the door diagonally to the left, away from the fireplace.
- Step 7.** Snap the replacement Lennox nameplate logo into the 2 holes provided in the replacement panel.
- Step 8.** Merit Series Units - Install the replacement bottom radiant panel using the existing hinge screws and spacers.
Merit Plus and Elite Series Units - Install the replacement bottom radiant panel by inserting the right side locating pin into the right cabinet corner post and then the left side spring-loaded pin into the left cabinet corner post.

CAT. NO.	MODEL	WHERE USED
88L36	RAD35C-2	EDV3530, ED3530 front-open, MPD3530, MPD35ST/PF, MPB35ST
88L37	RAD40C-2	EDV4035, ED4035-2, MPD4035 front open, EDVST, EDST-2, EDVPF, EDPF-2, EDVCR, EDCR-2, EDVCL, EDCL-2, EBST-2, EBVPF, EBPF-2, EBVCR, EBCR-2, EBVCL, EBCL-2 multi-open (long panel)
88L38	RAD45C-2	EDV4540, ED4540-2, MPD4540 front-open
88L35	RAD24C-2	EDVPF, EDPF-2, EDVCR, EDCR-2, EDVCL, EDCL-2, EBVPF, EBPF-2, EBVCR, EBCR-2, EBVCL, EBCL-2 multi-open (short panel)
98L12	RAD33C	MDR3328, MDT3328, MPDT3328, MPDR3328
26M47	RAD33MC	MPD3530, MPD35ST
H7019	RAD22C-2	MPD35PF

Table 1 - Painted Panel Kits

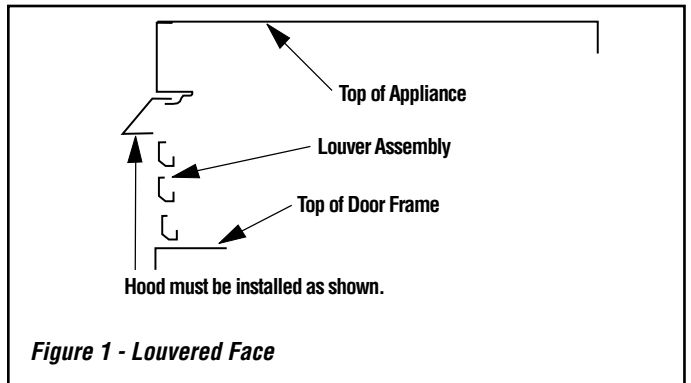


Figure 1 - Louvered Face

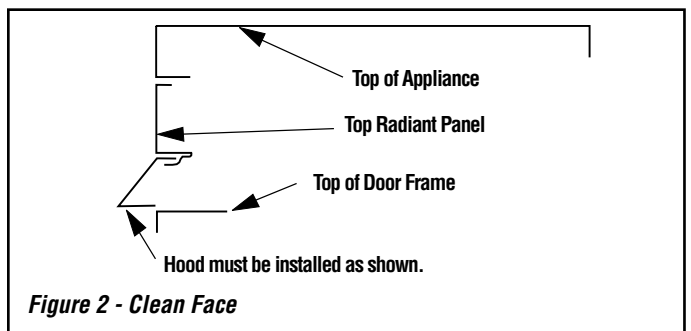


Figure 2 - Clean Face

NOTE: DIAGRAMS & ILLUSTRATIONS NOT TO SCALE.

Lennox Hearth Products reserves the right to make changes at any time, without notice, in design, materials, specifications, prices and the discontinuance of colors, styles and products. Consult your local distributor for fireplace code information.